

# ComfoSpot 50

## Installation instructions for round wall mounting pipe L = 900 mm



### Intended purpose

The round wall mounting pipe with an external diameter of 315 mm is made of PVC and is supplied with two blanking plugs (Fig. 1). It is used to hold the ComfoSpot 50 ventilation unit. A core hole measuring  $\varnothing$  340 mm must be drilled in the external wall for installation purposes. The final wall thickness must be between a minimum of 335 mm and a maximum of 885 mm.



Fig. 1 Scope of delivery for round wall mounting pipe

### Preparatory work

Choose an appropriate installation location in an external wall. Make sure that there is enough space for objects and for maintenance work to be carried out (at least 39 cm on the left, 29 cm on the right and 20 cm at the top, relative to the axis of the PVC wall mounting pipe when it is installed). At the front, make provision for an 70 cm clearance – relative to the inside of the external wall – so that the ComfoSpot 50 can be removed from the PVC wall mounting pipe.



**The location of the ComfoSpot 50 must meet all local and national code requirements. Ensure that proper clearance is provided to other fixtures in bathrooms or other "wet" rooms!**

### Core hole drilling

Vertical walls are required for installing the ComfoSpot 50 correctly.



**The hole diameter must be at least 340 mm. Make sure that the hole axis is horizontal (Fig. 2).**

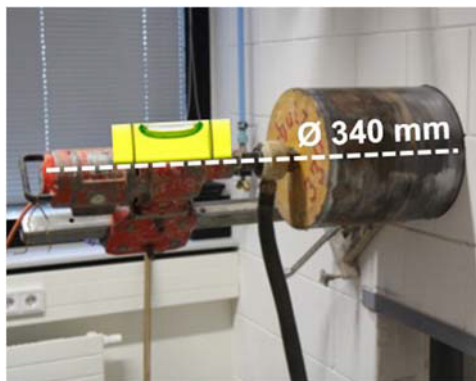


Fig. 2 Drilling the core hole

### Installing the wall mounting pipe

Insert the PVC wall mounting pipe into the core hole and make sure it is in a horizontal position (Fig. 3). Fix it in place in the hole using appropriate equipment. Use only non-swelling adhesive or installation foam to fix it in place.



**Make sure that the pipe axis is horizontal and that the circular shape of the pipe is maintained (the internal diameter must not deviate by any more than +/- 1.5 mm from a circular shape).**

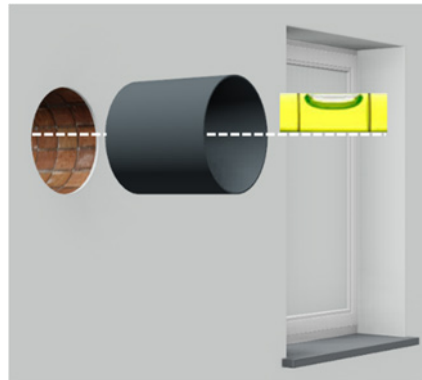


Fig. 3 Pushing in the wall mounting pipe

Before installing the ventilation unit, modify the PVC wall mounting pipe so that the end of it is flush with the surface of the façade or interior wall (Fig. 4). To do this, trim the pipe using a suitable tool until the end of it is flush with the finished wall.



Using suitable sealant, seal the inside and outside of the wall connection around the PVC wall mounting pipe (Fig. 5). After installation, reinsert the blanking plugs at both ends of the PVC wall mounting pipe.



Fig. 5 Sealing the wall mounting pipe